


 
INSTALLATION TYPES

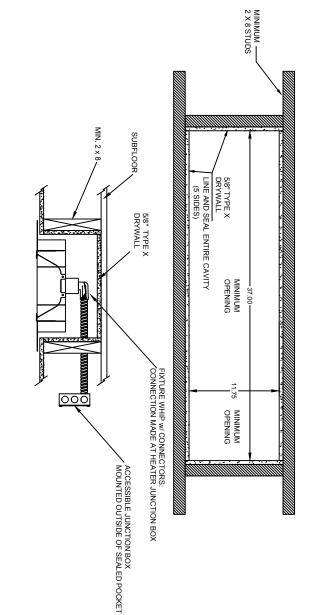


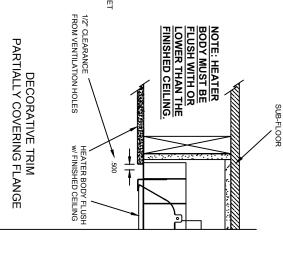

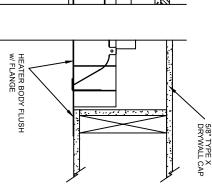



EXPOSED FLANGE

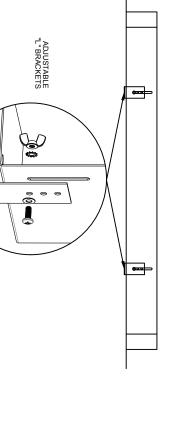

WARNINGS:

outside of sealed drywall pocket. on a pitched angle. a flat non-sloped ceiling. Accessible Junction Box must be installed Frame and Heater cannot be installed This Frame is ONLY to be used on Do not use Surface Mount Brackets Heater Body must face straight down and be flush with the finished ceiling.

-‡

Please contact factory for longer length
Hi-Temp Fixture Whips available for purchase.
Discard Surface Mounting Brackets provided
with Heater and use "L" Brackets. Must use 5/8" type "X" drywall. Use Licensed Electrician ONLY. Whip and Hi-Temp Ceramic Wire Nuts. Must use supplied 4 foot Hi-Temp Fixture

SURFACE VIEW

NOTES:

Mounting holes on Surface Flange to be determined and drilled by Contractor/Installer. Heater suspends (Gravity) by resting on adjustable "L" Brackets in flush mount fixture. Coil excess flex into heater cavity.

> a 15 minute cool down period is longevity. See controls brochure for recommended for maximum heater timer options. After 4 hours of continuous use,

	Z
	71
<u> </u>	IJ
www.infratoch usa.com	>
5	4
3	П
5	O
	I
	ž
1	344 V Gardena,

344 W 157th Street ardena, California 90248 Phone: (310) 354-1250 Fax: (310) 523-3674

18-2295 MATERIAL: 304 S.S. #4 FINISH

DESCRIPTION: W-33 FLUSH MOUNT FRAME (FOR USE WITH 33" HEATERS)

NOIES:

SUPPLIED w/ HI-TEMP FIXTURE WHIP DRAWN BY:

Dec. 16, 2019 N N ဥ